



Workshop Manual Transporter 2004 ➤

5-cylinder diesel engine								
Engine ID	AXD	AXE	BLJ	BNZ	BPC			

Edition 07.2021



List of Workshop Manual Repair Groups

Repair Group

- 00 - Technical data
- 10 - Removing and installing engine
- 13 - Crankshaft group
- 15 - Cylinder head, valve gear
- 17 - Lubrication
- 19 - Cooling
- 21 - Turbocharging/supercharging
- 23 - Mixture preparation - injection
- 26 - Exhaust system
- 28 - Glow plug system

Technical information should always be available to the foremen and mechanics, because their careful and constant adherence to the instructions is essential to ensure vehicle road-worthiness and safety. In addition, the normal basic safety precautions for working on motor vehicles must, as a matter of course, be observed.

All rights reserved.
No reproduction without prior agreement from publisher.



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when using testers and measuring instruments during a road test	2
2.2 Safety precautions when working on the cooling system	2
2.3 Safety regulations for working on fuel supply	3
2.4 Safety precautions when working on injection system	4
3 Repair instructions	5
3.1 Rules for cleanliness during work on fuel system	5
3.2 Rules for cleanliness when working on fuel supply system	5
3.3 Rules for cleanliness when working on injection system	6
3.4 Foreign objects in engine	6
10 - Removing and installing engine	7
1 Removing and installing engine	7
1.1 Removing engine	7
1.2 Securing engine to assembly stand	13
1.3 Installing engine	14
2 Assembly mountings	17
2.1 Assembly overview - assembly mountings	17
2.2 Removing and installing front torque reaction support	18
13 - Crankshaft group	20
1 Cylinder block (pulley end)	20
1.1 Assembly overview - crankcase	20
1.2 Crankcase - attachments	22
1.3 Removing and installing sealing flange on pulley end	24
1.4 Renewing seal for timing housing cover	25
1.5 Renewing alternator shaft oil seal	26
1.6 Removing and installing thread insert for tie bolt	29
2 Cylinder block, gearbox end	30
2.1 Assembly overview - valve timing housing cover	30
2.2 Removing and installing drive plate	32
2.3 Removing and installing flywheel	33
3 Crankshaft	36
3.1 Assembly overview - crankshaft	36
3.2 Basic settings for gear train	38
3.3 Crankshaft bearing cap identification	40
3.4 Crankshaft dimensions	41
3.5 Measuring axial clearance of crankshaft	41
3.6 Measuring radial clearance of crankshaft	42
4 Pistons and conrods	43
4.1 Assembly overview - pistons and conrods	43
4.2 Installation position and allocation of piston to cylinder	45
4.3 Measuring piston projection at TDC	45
4.4 Checking piston ring gap	46
4.5 Checking ring-to-groove clearance	47
4.6 Checking cylinder bores	47
4.7 Piston and cylinder dimensions	48
15 - Cylinder head, valve gear	49



1	Cylinder head	49
1.1	Assembly overview - cylinder head	49
1.2	Removing and installing cylinder head	54
1.3	Checking valve timing	58
1.4	Checking compression	60
2	Valve gear	62
2.1	Assembly overview - valve gear	62
2.2	Measuring axial play of camshaft	65
2.3	Removing and installing camshaft	66
2.4	Removing and installing camshaft drive gear	67
2.5	Removing and installing valve stem seals	72
3	Inlet and exhaust valves	75
3.1	Reworking valve seats	75
3.2	Checking valve guides	76
3.3	Valve dimensions	77
17 - Lubrication		79
1	Sump, oil pump	79
1.1	Assembly overview - sump/oil pump	79
1.2	Removing and installing oil sump	81
1.3	Engine oil:	83
2	Oil filter, oil pressure switch	85
2.1	Assembly overview - oil filter housing	85
2.2	Removing and installing oil filter housing	86
2.3	Checking oil pressure and oil pressure switch	90
2.4	Measuring oil consumption	92
19 - Cooling		93
1	Cooling system/coolant	93
1.1	Connection diagram - coolant hoses	93
1.2	Draining and adding coolant	93
1.3	Checking cooling system for leaks	101
2	Coolant pump, regulation of cooling system	103
2.1	Assembly overview - coolant pump, thermostat	103
2.2	Removing and installing coolant temperature sender G62	105
2.3	Removing and installing thermostat housing	107
2.4	Removing and installing coolant pump	107
2.5	Removing and installing coolant union	112
2.6	Renewing pipe connection for coolant	113
3	Radiator, radiator fan	115
3.1	Assembly overview - radiator, radiator fan	115
3.2	Assembly overview – fan support	117
3.3	Removing and installing radiator	117
21 - Turbocharging/supercharging		120
1	Turbocharger	120
1.1	Assembly overview - turbocharger	120
1.2	Assembly overview - turbocharger	122
1.3	Removing and installing turbocharger	124
1.4	Removing and installing turbocharger	126
2	Charge air system	131
2.1	Assembly overview - charge air system	131
2.2	Checking charge air system for leaks	132
2.3	Installing hose connections with plug-in connectors	135



23 - Mixture preparation - injection	137
1 Injection system	137
1.1 Bleeding fuel system	137
2 Injectors	138
2.1 Assembly overview - unit injector	138
2.2 Removing and installing unit injector	138
2.3 Removing and installing wiring harness for unit injectors	142
2.4 Removing and installing O-rings for unit injector	145
2.5 Visual inspection of unit injector	147
3 Vacuum system	148
3.1 Vacuum hose schematic diagram	148
3.2 Vacuum hose schematic diagram	148
4 Senders and sensors	150
4.1 Removing and installing fuel temperature sender G81	150
5 Intake manifold	151
5.1 Assembly overview – intake manifold	151
5.2 Assembly overview – intake manifold flap	151
5.3 Assembly overview – intake manifold flap	152
6 Air filter	154
6.1 Assembly overview - air filter	154
7 Engine control unit	155
7.1 Removing and installing engine control unit	155
26 - Exhaust system	157
1 Exhaust pipes and silencers	157
1.1 Assembly overview – silencers	157
1.2 Assembly overview – silencers	159
1.3 Separating front and rear silencers	160
1.4 Installation position of clamps	162
1.5 Checking exhaust system for leaks	162
2 Emission control	163
2.1 Assembly overview - particulate filter	163
2.2 Removing and installing particulate filter	165
3 Exhaust gas temperature regulation	173
3.1 Removing and installing exhaust gas temperature sender 1 G235	173
3.2 Removing and installing exhaust gas temperature sender 2 G448	174
3.3 Removing and installing exhaust gas temperature sender 3 G495	176
4 Exhaust gas recirculation	178
4.1 Assembly overview – exhaust gas recirculation	178
4.2 Checking mechanical exhaust gas recirculation valve	181
4.3 Checking electronic exhaust gas recirculation valve	182
28 - Glow plug system	184
1 Glow plug system	184
1.1 Removing and installing glow plugs Q10/Q14	184
1.2 Checking glow plugs Q10/Q14	186
1.3 Removing and installing engine speed sender G28	189

