

VOLVO C30

WIRING DIAGRAM 2007



TP 39103202

Table of Contents 1:3

| | |
|---|----|
| Vehicles with SRS (Airbag)/SIPS bag/IC (Inflatable Curtain) | 2 |
| Abbreviations | 7 |
| How to use the wiring diagrams 1:2..... | 8 |
| Electrical distribution 1:2..... | 10 |

Fuses

| | |
|--|----|
| Engine compartment distribution box F1-F10..... | 12 |
| Engine compartment distribution box F11-F18..... | 13 |
| Engine compartment distribution box F20-F31..... | 14 |
| Engine compartment distribution box F32-F34..... | 15 |
| Engine compartment distribution box F35-F36..... | 16 |
| Distribution box in engine compartment FH1..... | 17 |
| Central Electronic Module (CEM) F43-F49..... | 18 |
| Central Electronic Module (CEM) F51-F63..... | 19 |
| Central Electronic Module (CEM) F64-F74..... | 20 |
| Central Electronic Module (CEM) F79-F86..... | 21 |
| Battery PF1-PF2..... | 22 |
| Fuses in holder | 23 |

Relays

| | |
|--|----|
| Ignition switch and relays..... | 24 |
| Distribution box in engine compartment R2-R14..... | 25 |
| Central Electronic Module (CEM) R15-R18..... | 26 |
| Central Electronic Module (CEM) R1 - R11B | 27 |
| Relays - accessories..... | 28 |

Ground connections

| | |
|------------------------------------|----|
| Overview..... | 29 |
| 31/3 - 31/10 | 30 |
| 31/11 - 31/52 | 31 |
| 31/66 - 31/67 | 32 |
| 31/80 - 31/89 | 33 |
| 31/110 - 31/119 | 34 |
| Ground connections in chassis..... | 35 |

Control modules

| | |
|---|----|
| Overview of locations..... | 36 |
| Overview of designations..... | 37 |
| Central Electronic Module (CEM)1:2 | 38 |
| Data communication, Low speed CAN 1:2 | 40 |
| Data communication, High speed CAN | 42 |
| Data communication MOST | 43 |
| Data communication LIN 1:2 | 44 |
| Start Control Module (SCU) | 46 |

Group 23 Fuel system

| | |
|---|----|
| Engine management system Diesel, 5-cyl. 2.4l 1:3..... | 47 |
| Engine management system, 4-cyl. 1.6l 1:2..... | 50 |
| Engine management system, 4-cyl. 1.8l & 2.0l 1:2..... | 52 |
| Engine management system, 5-cyl. 1:2..... | 54 |
| Engine management system, 5-cyl. Turbo 1:2 | 56 |
| Engine management system Diesel, 4-cyl. 1.6l 1:2..... | 58 |
| Engine management system Diesel, 4-cyl. 2.0l 1:2..... | 60 |
| Emission control, 4-cyl. 1.6l | 62 |
| Emission control 4-cyl. 1.8l & 2.0l..... | 63 |
| Emission control, 5-cyl..... | 64 |
| Emission control, 5-cyl. Turbo..... | 65 |

Group 26 Cooling system

| | |
|--------------------------|----|
| Cooling fan..... | 66 |
| Cooling fan, Diesel..... | 67 |

Group 27 Engine control

| | |
|-----------------------------|----|
| Cruise control, 4-cyl. | 68 |
| Cruise control, 5-cyl. | 69 |

Group 32 Alternator and voltage regulator

| | |
|--------------------------|----|
| Power supply, 4-cyl..... | 70 |
| Power supply, 5-cyl..... | 71 |

Group 33 Starting system

| | |
|-------------------------------------|----|
| Starting system, 4-cyl..... | 72 |
| Starting system, 5-cyl..... | 73 |
| Starting system, 5-cyl. Diesel..... | 74 |

Group 35 Lighting

| | |
|---|----|
| High and low beam | 75 |
| High and low beam (Bi-Xenon)..... | 76 |
| Manual beam length adjustment..... | 77 |
| Automatic beam length adjustment (Bi-Xenon) | 78 |
| Position/Parking lights, Tail lights | 79 |
| Position/Parking lights, Tail lights (Bi-Xenon) | 80 |
| Fog lights | 81 |
| Fog lights LHD Japan | 82 |
| Brake light..... | 83 |
| Reversing light | 84 |
| Follow-me-home lighting..... | 85 |
| Interior lighting 1:2 | 86 |
| Instrument and control illumination | 88 |
| Auxiliary lights..... | 89 |

Table of Contents 2:3

Group 36 Additional electrical equipment

| | |
|---|-----|
| Direction indicator and hazard warning flashers | 90 |
| Direction indicator and hazard warning flashers (Bi-Xenon)..... | 91 |
| Wiper/washer..... | 92 |
| Headlight washer..... | 93 |
| Rear window wiper/washer..... | 94 |
| Rain sensor..... | 95 |
| Horn | 96 |
| Immobilizer/Steering column lock module (SCL) | 97 |
| Keyless vehicle 1:2..... | 98 |
| Rear parking assistance..... | 100 |
| Front parking assistance..... | 101 |
| Anti-theft alarm | 102 |
| Alcolock | 103 |

Group 37 Wiring and fuses

| | |
|--------------------------------------|-----|
| 12V outlet | 104 |
| Diagnostics system..... | 105 |
| Tow hitch cable harness, 4-pin..... | 106 |
| Tow hitch cable harness, 7-pin..... | 107 |
| Tow hitch cable harness, 13-pin..... | 108 |

Group 38 Instruments

| | |
|--------------------------------|-----|
| Driver information module..... | 109 |
| Seat belt reminder | 110 |

Group 39 Other

| | |
|---|-----|
| Multimedia & Traffic information | 111 |
| Audio 1:2 | 112 |
| Audio High Performance/Premium Sound 1:2..... | 114 |
| Cellular phone 1:2..... | 116 |
| Satellite radio..... | 118 |

Group 43 Transmission

| | |
|-------------------------------------|-----|
| Automatic transmission AW55-51..... | 119 |
| Transmission M66 | 120 |

Group 59 Brake system

| | |
|----------------------------------|-----|
| Brake control system & DSTC..... | 121 |
|----------------------------------|-----|

Group 64 Steering

| | |
|--------------------------------|-----|
| Electronic power steering..... | 122 |
|--------------------------------|-----|

Group 83 Doors and openings

| | |
|---|-----|
| Central locking | 123 |
| Central locking, trunk lid/tailgate..... | 124 |
| Central locking, fuel filler flap..... | 125 |
| Signal receiver, remote-control, central locking..... | 126 |
| Power windows..... | 127 |
| Power sunroof..... | 128 |

Group 84 Exterior decorative elements, etc.

| | |
|------------------------------------|-----|
| Power rear view mirrors..... | 129 |
| Heated door mirrors..... | 130 |
| Heated rear window..... | 131 |
| Blind Spot Information System..... | 132 |

Group 85 Interior equipment

| | |
|--|-----|
| Power driver's seat with memory function, LHD | 133 |
| Power driver's seat with memory function, RHD..... | 134 |
| Power passenger seat with memory function, LHD | 135 |
| Power passenger seat with memory function, RHD | 136 |
| Heated seats..... | 137 |

Group 87 Climate control system

| | |
|---|-----|
| Climate control system, 4-cyl. Gasoline 1:2..... | 138 |
| Climate control system, 5-cyl.1:2..... | 140 |
| Climate control system, Diesel 1.6l & 2.0l 1:2..... | 142 |
| Climate control system PTC element | 144 |
| Parking heater, auxiliary heater | 145 |
| Electric engine heater Flexifuel..... | 146 |

Group 88 Internal equipment

| | |
|--|-----|
| Auto-dimming rearview mirror..... | 147 |
| Supplemental Restraint System (SRS) 1:2..... | 148 |

Connectors..... 150

Branching points175

Table of Contents 3:3

Routing of the cable harnesses in the vehicle

| | |
|---|-----|
| Engine harness, Gasoline 4-Cyl 1.6 | 184 |
| Engine harness, Gasoline 4-Cyl 1.8 | 184 |
| Engine harness, Gasoline 5-Cyl | 185 |
| Engine harness, Gasoline 5-Cyl Turbo..... | 185 |
| Engine harness, Diesel 1.6l..... | 186 |
| Engine harness, Diesel 2.0l..... | 186 |
| Engine harness, Diesel 2.4l..... | 187 |
| Engine compartment harness, 4-Cyl. | 188 |
| Engine compartment harness, 5-Cyl. | 188 |
| Dashboard harness, LHD | 189 |
| Dashboard harness, RHD..... | 189 |
| Floor harness, LHD..... | 190 |
| Floor harness, RHD | 191 |
| Roof harness | 192 |
| Tunnel harness | 192 |
| Driver's door harness..... | 193 |
| Passenger door harness..... | 193 |
| Trunk lid harness | 194 |


Component images 195

Index 1:2.....239

List of components 1:5241

Fuses

Engine compartment distribution box F20-F31

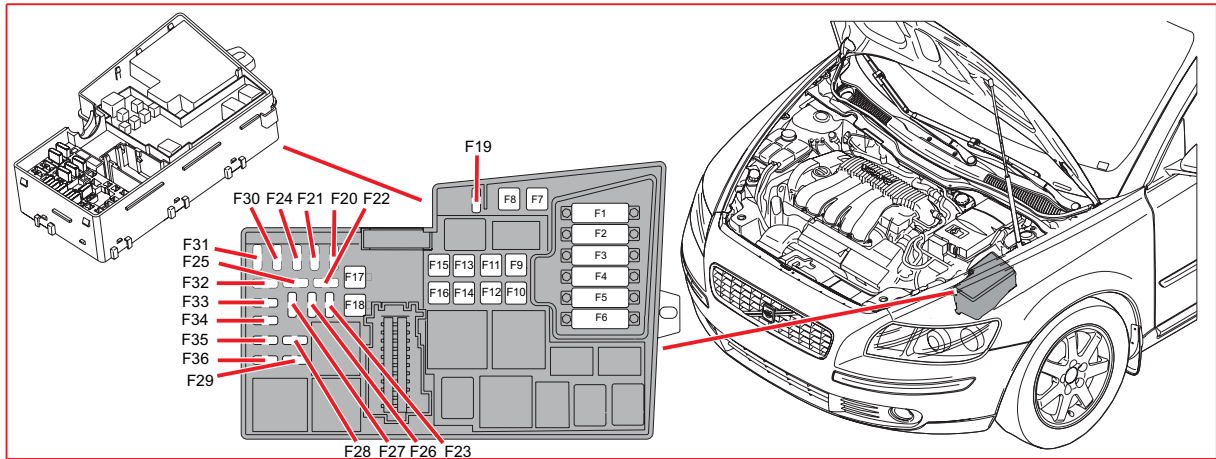


15/31 Engine compartment distribution box

| No. | Fuse function | via | A |
|-----------|--|-------------------------------|----|
| F20 | 2/17 Relay, horn 16/10 Horn 1 16/11 Horn 2 | - 2/17 2/17 | 15 |
| F21 | 4/7 Combustion Preheater Module (CPM) | - | 20 |
| F22 | - | - | - |
| F23 | 4/28 Transmission Control Module (TCM) 4/46 Engine Control Module (ECM), 5-cyl. Gasoline | - - | 10 |
| F24 | 9/32 PTC-resistor, crankcase ventilation, 5-cyl. 2.4l Diesel 9/38 Electrically heated fuel filter | 2/142 2/142 | 20 |
| F26 | 3/1 Start Control Module (SCU) 4/56 Central Electronic Module (CEM) 11K/2 Fuse in holder F44 Fuse in the Central Electronic Module (CEM) F51-F54 Fuses in the Central Electronic Module (CEM) F73 Fuse in the Central Electronic Module (CEM) | - 3/1 3/1 3/1 3/1 | 15 |
| F27 | 8/3 Electromagnetic clutch, climate control system | 2/22 | 10 |
| F29 | 2/34 Relay, front fog lights 10/5 Fog light, front left 10/6 Fog light, front right | - 2/34 2/34 | 15 |
| F30 | 4/46 Engine control module (ECM), 4-cyl. 1.6l/2.0l Diesel | - | 3 |
| F31 | 6/26 Alternator, 4-cyl. | - | 10 |
| continues | | | |

Routing of the cable harnesses in the vehicle

Engine harness, Gasoline 4-Cyl 1.6

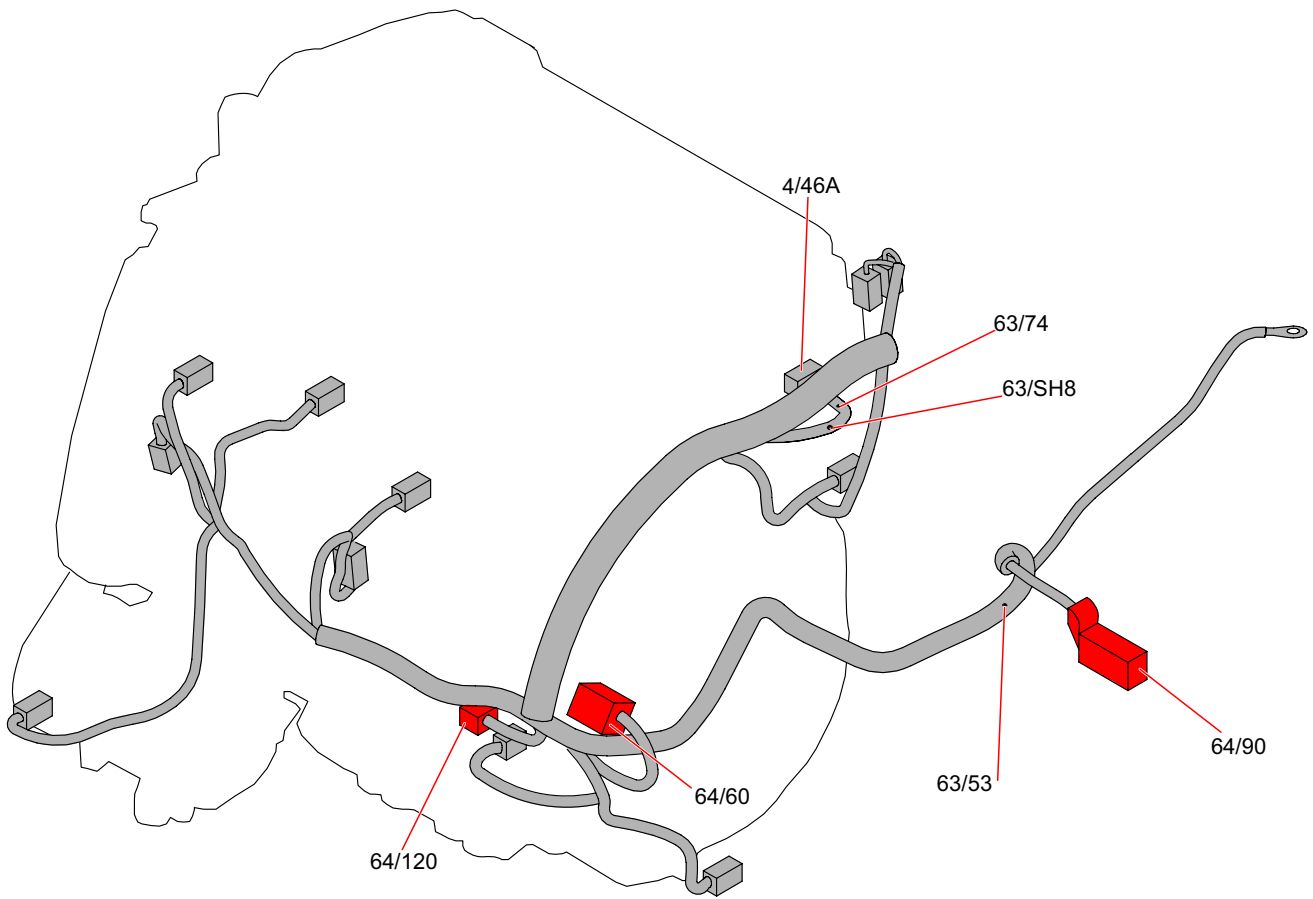

Routing of the cable harnesses in the vehicle

Engine harness, Gasoline 4-Cyl 1.8

