



**Volvo S60**  
(2001-2002)



**Wiring Diagrams and Electric Model Year 2002**

Abbreviations .....	3
How to use the wiring diagram .....	4

## Electrical distribution

Overview .....	6
----------------	---

## Fuses

Engine compartment 11A/1-7 .....	8
Engine compartment 11B/1-9 .....	9
Engine compartment 11B/11-23 .....	10
Passenger compartment 11C/1-21 .....	11
Passenger compartment 11C/22-28 .....	12
Passenger compartment 11C/29-38 .....	13
Cargo compartment 11D/1-18 .....	14
Cargo compartment 11E/1-7 .....	15

## Relays/Shunts

Ignition switch with relays .....	16
Engine compartment FMA2 - FST3 .....	17
Passenger compartment CMA2 - CSH4 .....	18
Cargo compartment RMA1 - RSH6 .....	19
Other relays .....	20

## Ground connection

31/1 - 31/66 .....	21
31/67 - 31/91 .....	22
31/93 - 31/98 .....	23

## Control modules

Overview .....	24
Central Electronic Module CEM .....	26
Rear Electronic Module REM .....	28
Data communication .....	30

## Group 23

Engine management system Denso .....	32
Engine management system, ME7 5-cylinders .....	34
Engine management system, ME7 6-cylinders .....	36
Engine management system, Bifuel .....	38
Engine management system, Diesel .....	40
Emission control Denso .....	42
Emission control ME7 .....	43

## Group 26

Electric cooling fan .....	44
----------------------------	----

## Group 27

Cruise control .....	45
----------------------	----

## Group 32

Power supply .....	46
--------------------	----

## Group 33

Starting system .....	47
-----------------------	----

## Group 35

High beam, low beam and auxiliary light wiring .....	48
High beam, low beam and auxiliary light wiring Bi-Xenon .....	49

Fog lights .....	50
Parking lights, tail lights and license plate lighting .....	51
Brake lights .....	52
Reversing lights .....	53
Interior lighting .....	54
Beam length adjustment .....	55
Instrument and control lighting .....	56
Safety lighting .....	57

## Group 36

Indicators and warning lights .....	58
Horn .....	59
Wiper/Washer, Windscreen .....	60
Wiper/Washer, Headlights .....	61
Rain sensor .....	62
Electronic immobilizer .....	63
Anti-theft alarm .....	64
Control module, electronic accessories .....	65

## Group 37

Diagnostics system .....	66
Towing bracket wiring .....	67
12V outlet .....	68
12V outlet, cargo compartment .....	69

## Group 38

Seat belt reminder .....	70
Combined instrument panel .....	71
Combined instrument panel, Bifuel .....	72

## Group 39

Audio without auxiliary amplifier .....	73
Audio with auxiliary amplifier .....	74
Road Traffic Information RTI .....	76
Mobile telephone .....	77

## Group 43

Automatic transmission, AW 55-50 .....	78
Automatic transmission, 4T65EV .....	79
Geartronic .....	80
Shift lock .....	81
Differential Electronic Module DEM .....	82

## Group 59

Brake control system .....	83
----------------------------	----

## Group 64

Electronic power steering .....	84
---------------------------------	----

## Group 83

Power windows .....	85
Central lock .....	86
Power sunroof .....	87

## Group 84

Heated rear window .....	88
Heated door mirrors .....	89
Power door mirrors .....	90

**Order number TP 3960032**  
Replaces previous manual TP 3960031

# Contents

## Group 85

Heated seats.....	91
Power driver's seat .....	92
Power passenger seat .....	93

## Group 87

Standard heater.....	94
Manual climate control (MCC).....	95
Electronic climate control (ECC).....	96
Parking heater, auxiliary heater.....	97

## Group 88

Electrically adjustable head restraint .....	98
Supplemental Restraint System (SRS).....	99
Remote garage door opener .....	100

## Connectors

54/1B - 54/3LB.....	101
54/3LC - 54/3LE .....	102
54/3LF - 54/3LG .....	103
54/3LH - 54/8 .....	104
54/9 - 54/10 .....	105
54/11 - 54/12 .....	106
54/13 - 54/14.....	107
54/16 - 54/20.....	108
54/21 - 54/22B.....	109
54/23A - 54/24.....	110
54/25 - 54/33.....	111
54/34 - 54/37.....	112
54/40 - 54/40A.....	113
54/40B - 54/50.....	114
54/51 - 54/54.....	115
54/55 - 54/58.....	116
54/59 - 54/74.....	117
54/79 - 54/106.....	118

## Junction points

53/301 - 53/326.....	119
53/328 - 53/368.....	120
53/369 - 53/378.....	121
53/379 - 53/405.....	122
53/406 - 53/431.....	123
53/433 - 53/500.....	124
53/501 - 53/517.....	125
53/519 - 53/528.....	126
53/531 - 53/609.....	127
53/615 - 53/664.....	128

## Cable harness routing in vehicle

Engine harness ME7/Denso.....	129
Engine harness Diesel .....	130

Transmission harness 4T65EV.....	131
Front engine compartment harness LHD.....	132
Front engine compartment harness RHD.....	133
Front passenger compartment harness LHD.....	134
Front passenger compartment harness RHD.....	135
Rear passenger compartment harness & Cargo compartment harness, tunnel.....	136
Roof harness & Boot lid/taillgate harness .....	137
Door harness .....	138
Bifuel harness.....	139


## Component illustrations

1/1 - 2/34.....	140
2/35 - 2/82.....	141
2/83 - 2/119.....	142
2/120 - 3/6 .....	143
3/6 - 3/53.....	144
3/56 - 3/86 .....	145
3/91 - 3/122.....	146
3/123 - 3/171 .....	147
3/173 - 4/46.....	148
4/50 - 4/202.....	149
5/1 - 6/25.....	150
6/26 - 6/63 .....	151
6/64 - 6/103.....	152
6/105 - 7/15.....	153
7/16 - 7/74 .....	154
7/77 - 7/116.....	155
7/120 - 7/159.....	156
7/162 - 8/28.....	157
8/30 - 8/46 .....	158
8/51 - 8/78 .....	159
8/79 - 9/13 .....	160
9/16 - 10/12.....	161
10/11 - 10/45 .....	162
10/44 - 10/52 .....	163
10/53 - 10/68.....	164
10/70 - 10/130.....	165
10/129 - 15/20.....	166
15/21 - 16/6.....	167
16/9 - 16/47.....	168
16/55 - 17/13 .....	169
17/17 - 20/32 .....	170
20/33 - 31/47 .....	171
31/48 - 31/93.....	172
31/94 - 54/9.....	173
54/10 - 54/33.....	174
54/34 - 54/55 .....	175
54/56 - 54/106.....	176

## List of components

# Fuses

## Engine compartment 11B/1-9

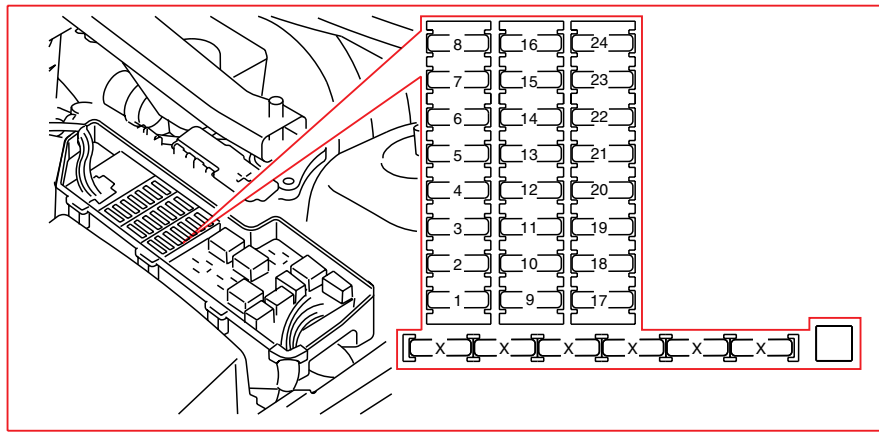


### 11B Fuses in the engine compartment

No.	Fuse function	A
1	Control module CPM 4/7	25
2	Accessory (auxiliary light)	20
3	Vacuum pump 6/114 via 8/84 Solenoid valve, high-pressure diesel 8/111 E.E	15 10
4	Engine Control Module ECM 4/46 diesel Lambda probe 7/15 Lambda probe diagnosis 1 7/82 Lambda probe 3 7/103 Lambda probe 4 (diagnostic probe) 7/104 Solenoid valve, high-pressure diesel 8/111 L.E	20
5	Pump, fuel leakage control 6/67 EVAP valve 8/18 Variable valve timing valve 8/19 Turbocharger control valve 8/28 Canister shut-off valve 8/44 Solenoid, variable valve timing outlet 8/81 PTC resistor, air preheating 9/32	10
6	Mass airflow meter MAF 7/17 Diesel Engine Control Module ECM 4/46 Mass air flow meter MAF 7/17 Injectors 8/6-11	5 15
7	Control unit ETM 4/50	10
8	Cooling fan, electrics box, engine compartment 6/44 Accelerator pedal sensor 7/51 Solenoid switch AC 8/3 via 2/22	10
9	Horn 1 16/10 via 2/11 Horn 2 16/11 via 2/11	15
continues		

# Control modules

## Central Electronic Module CEM

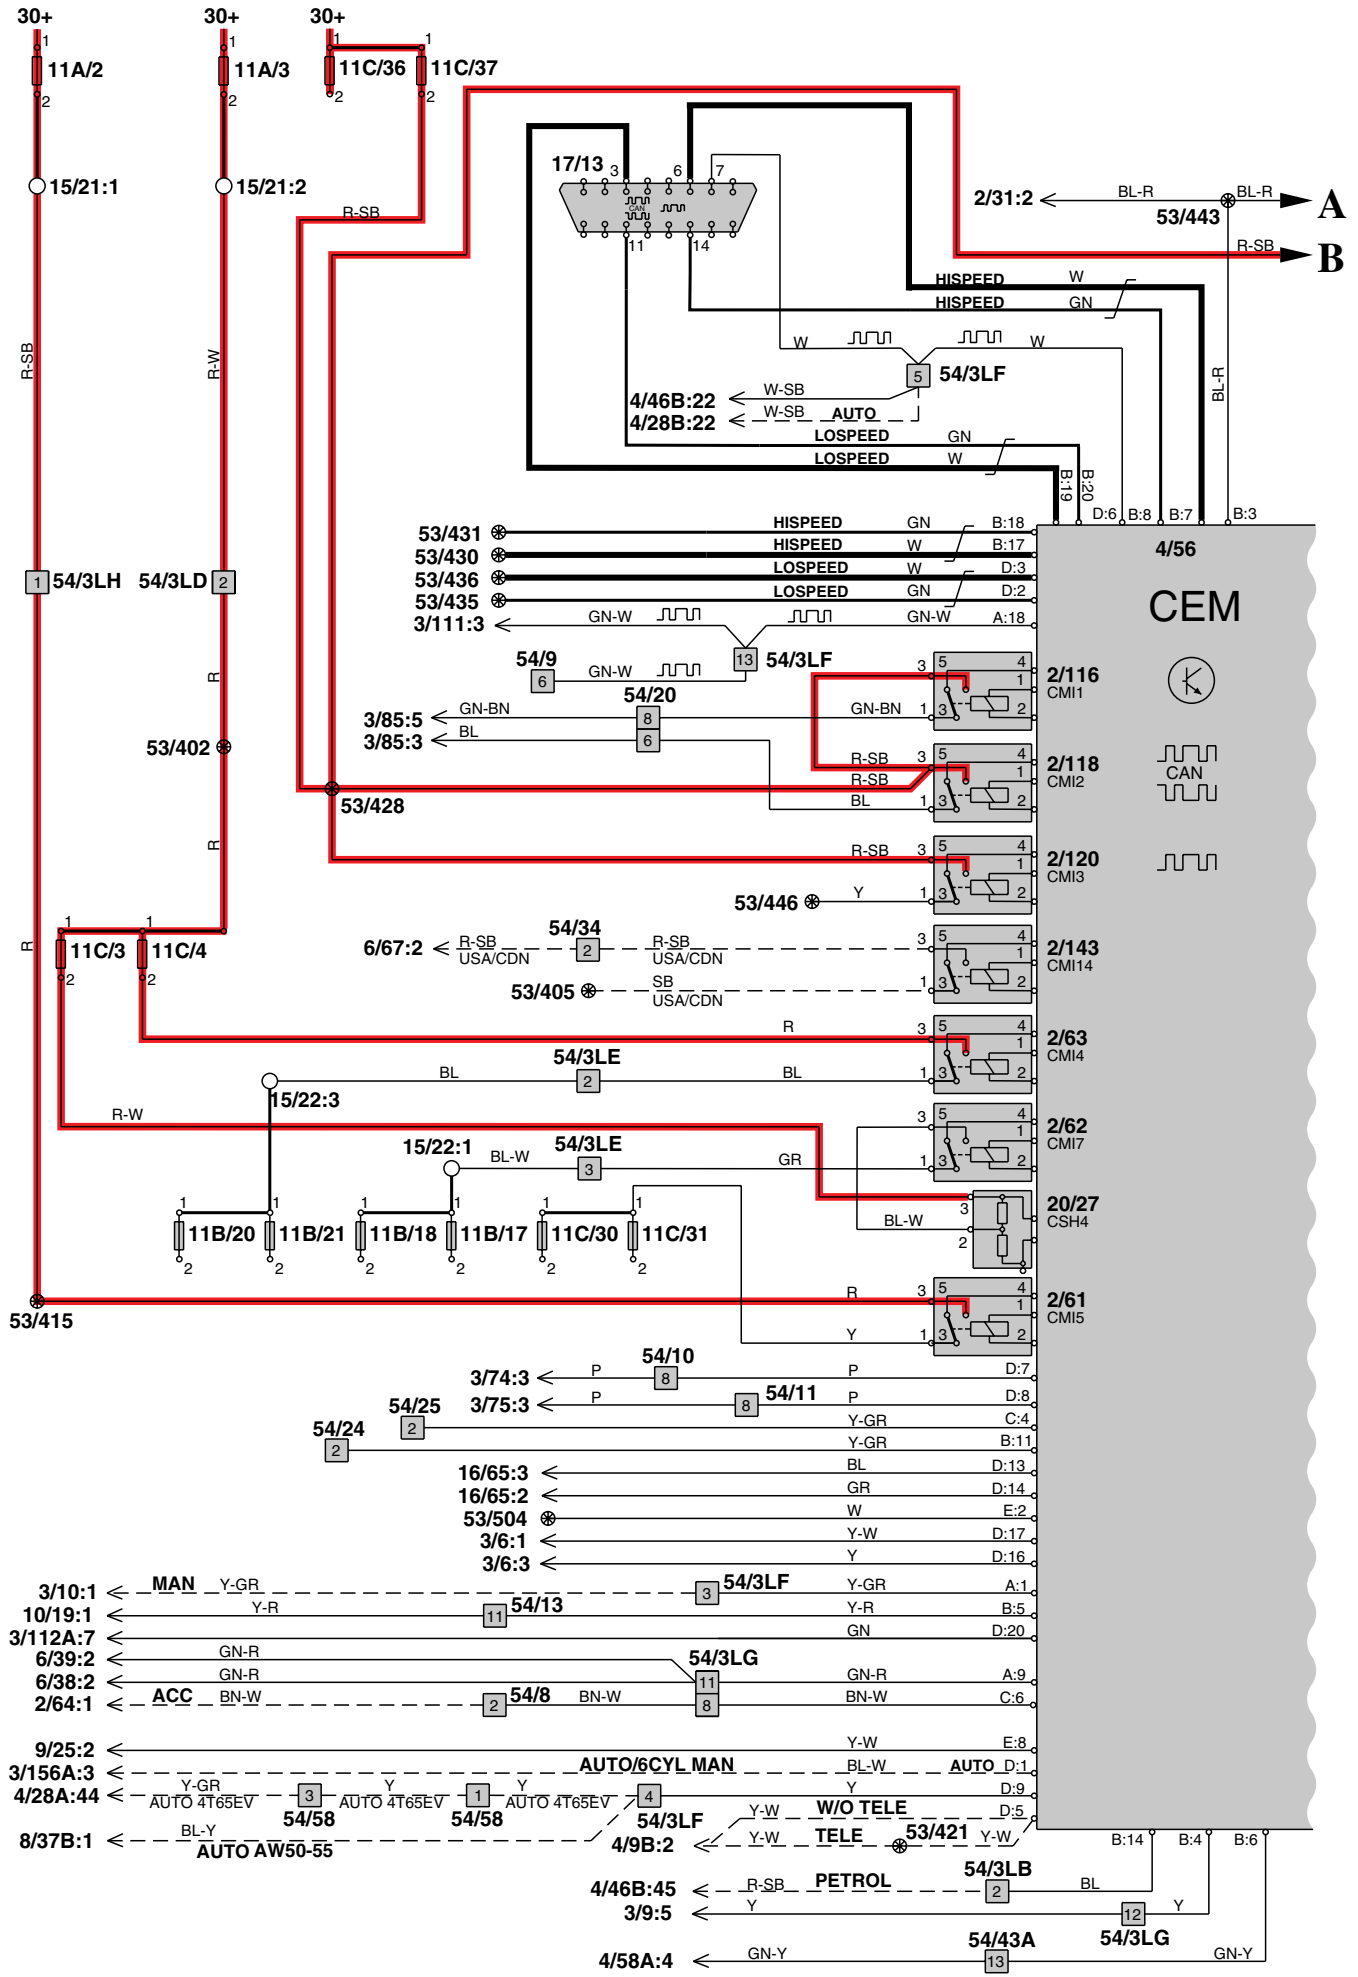

# Cable harness routing in vehicle Engine harness ME7/Denso

