



**Volvo V70**  
(2001-2002)



**Wiring Diagrams and Electric Model Year 2002**

Abbreviations .....	3
How to use the wiring diagram .....	4

## Electrical distribution

Overview .....	6
----------------	---

## Fuses

Engine compartment 11A/1-7 .....	8
Engine compartment 11B/1-10.....	9
Engine compartment 11B/11-23.....	10
Passenger compartment 11C/1-17 .....	11
Passenger compartment 11C/18-25.....	12
Passenger compartment 11C/26-31 .....	13
Passenger compartment 11C/32-38.....	14
Cargo compartment 11D/1-7 .....	15
Cargo compartment 11D/8-18.....	16
Cargo compartment 11E/1-7 .....	17

## Relays/Shunts

Ignition switch with relays .....	18
Engine compartment FMA2 - FST3.....	19
Passenger compartment CMA2 - CSH4.....	20
Cargo compartment RMA1 - RSH6 .....	21
Other relays.....	22

## Ground connection

31/1 - 31/67 .....	23
31/70 - 31/91 .....	24
31/93 - 31/98.....	25

## Control modules

Overview .....	26
Central Electronic Module CEM .....	28
Rear Electronic Module REM .....	30
Data communication .....	32

## Group 23

Engine management system Denso .....	34
Engine management system ME7.....	36
Engine management system, Bifuel.....	38
Engine management system, Diesel.....	40
Emission control Denso.....	42
Emission control ME7 .....	43

## Group 26

Electric cooling fan .....	44
----------------------------	----

## Group 27

Cruise control.....	45
---------------------	----

## Group 32

Power supply.....	46
-------------------	----

## Group 33

Starting system.....	47
----------------------	----

## Group 35

High beam, low beam and auxiliary light wiring.....	48
High beam, low beam and auxiliary light wiring Bi-Xenon .....	49
Fog lights.....	50
Parking lights, tail lights and license plate lighting .....	51
Brake lights .....	52
Reversing lights .....	53
Interior lighting.....	54
Beam length adjustment .....	55
Safety lighting.....	56
Instrument and control lighting.....	57

## Group 36

Indicators and warning lights.....	58
Horn .....	59
Wiper/Washer, Windscreen.....	60
Wiper/Washer, Headlights .....	61
Wipers/washers, Rear window .....	62
Control module, electronic accessories.....	63
Rain sensor .....	64
Anti-theft alarm .....	65
Electronic immobilizer.....	66

## Group 37

Towing bracket wiring .....	67
Diagnostics system.....	68
12V outlet.....	69
12V outlet, cargo compartment .....	70

## Group 38

Combined instrument panel.....	71
Combined instrument panel, Bifuel .....	72
Seat belt reminder.....	73

## Group 39

Audio with auxiliary amplifier .....	74
Audio without auxiliary amplifier .....	76
Road Traffic Information RTI .....	77
Mobile telephone .....	78

## Group 43

Electronically controlled automatic transmission, AW55-50 .....	79
Geartronic .....	80
Shift lock .....	81

## Group 59

Brake control module BCM .....	82
--------------------------------	----

## Group 64

Electronic power steering .....	83
---------------------------------	----

## Group 83

Power windows .....	84
Central lock.....	85

## Group 83

Power sunroof.....	86
--------------------	----

**Order number TP 3961032**  
Replaces previous manual TP 3961031

## Group 84

Heated rear window .....	87
Heated door mirrors .....	88
Power door mirrors .....	89

## Group 85

Heated seats .....	90
Power driver's seat .....	91
Power passenger seat .....	92

## Group 87

Standard heater .....	93
Manual climate control (MCC) .....	94
Electronic climate control (ECC) .....	95
Parking heater, auxiliary heater .....	96

## Group 88

Supplemental Restraint System (SRS) .....	97
Remote garage door opener .....	98
Electrically adjustable head restraint .....	99

## Connectors

54/1B - 54/3LB .....	100
54/3LC - 54/3LE .....	101
54/3LF - 54/3LG .....	102
54/3LH - 54/8 .....	103
54/9 - 54/10 .....	104
54/11 - 54/12 .....	105
54/13 - 54/14 .....	106
54/16 - 54/20 .....	107
54/21 - 54/22B .....	108
54/23A - 54/24 .....	109
54/25 - 54/34 .....	110
54/35 - 54/39 .....	111
54/40 .....	112
54/43 - 54/45 .....	113
54/50 - 54/51 .....	114
54/53 - 54/65 .....	115
54/79 - 54/106 .....	116

## Junction points

53/301 - 53/328 .....	117
53/329 - 53/370 .....	118
53/371 - 53/384 .....	119
53/389 - 53/419 .....	120
53/421 - 53/436 .....	121
53/437 - 53/505 .....	122
53/510 - 53/524 .....	123
53/525 - 53/601 .....	124
53/602 - 53/654 .....	125
53/655 - 53/664 .....	126

## Cable harness routing in vehicle

Engine harness ME7/Denso .....	127
Engine harness Diesel .....	128
Front engine compartment harness LHD .....	129
Front engine compartment harness RHD .....	130
Front passenger compartment harness LHD .....	131
Front passenger compartment harness RHD .....	132
Rear passenger compartment harness & Cargo compartment harness .....	133
Inflatable curtain harness & Boot lid/tailgate harness .....	134
Door harness .....	135
Bifuel harness .....	136


## Component illustrations

1/1 - 2/33 .....	137
2/34 - 2/80 .....	138
2/82 - 2/116 .....	139
2/117 - 3/1 .....	140
3/4 - 3/56 .....	141
3/59 - 3/92 .....	142
3/93 - 3/125 .....	143
3/126 - 3/184 .....	144
4/7 - 4/68 .....	145
4/70 - 6/15 .....	146
6/16 - 6/33 .....	147
6/35 - 6/67 .....	148
6/69 - 7/4 .....	149
7/5 - 7/32 .....	150
7/41 - 7/91 .....	151
7/100 - 7/135 .....	152
7/136 - 7/173 .....	153
8/3 - 8/36 .....	154
8/37 - 8/75 .....	155
8/76 - 9/13 .....	156
9/16 - 10/14 .....	157
10/15 - 10/66 .....	158
10/68 - 11B .....	159
11C - 15/30 .....	160
16/1 - 16/46 .....	161
16/47 - 16/74 .....	162
16/77 - 20/16 .....	163
20/22 - 31/2 .....	164
31/3 - 31/73 .....	165
31/83 - 54/1B .....	166
54/3LA - 54/16 .....	167
54/20 - 54/43A .....	168
54/44 - 54/106 .....	169

## List of components

## Relays/Shunts

### Passenger compartment CMA2 - CSH4

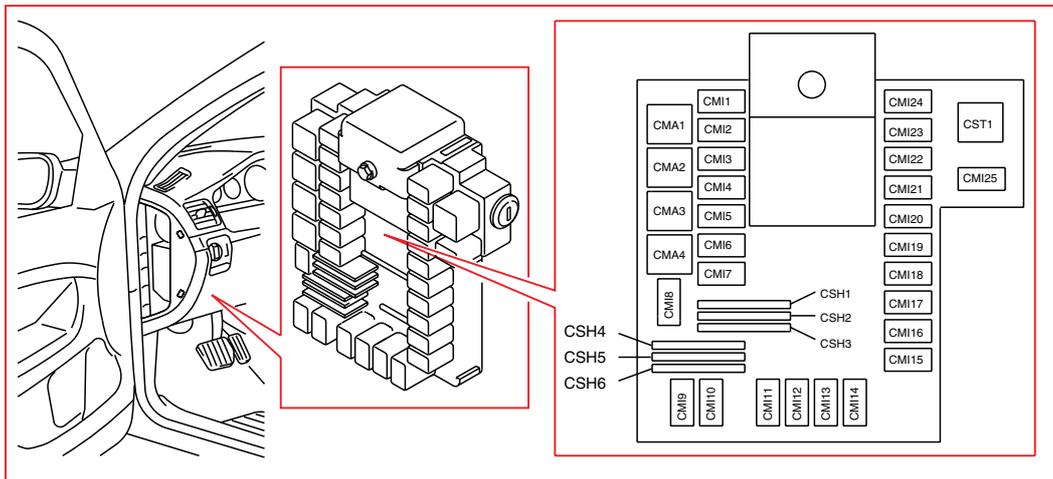

### Relays/Shunts in passenger compartment

Pos	Relay function
CMA2	X feed overload relay 2/30
CMA3	15-feed overload relay 2/31
CMI1	Relay, rear left power window up 2/116
CMI2	Relay, rear left power window down 2/118
CMI3	Power window relay, child lock rear door 2/120
CMI4	High beam relay 2/63
CMI5	Relay, parking light 2/61
CMI7	Relay, low beam 2/62
CMI11	Fog light relay, front 2/34
CMI12	Relay, fuel pump 2/23
CMI14	Relay, fuel leakage control 2/143
CMI21	Relay for extended D2 feed, automatic transmission 2/101
CMI22	Relay, extended D1 feed 2/29
CMI23	Relay, right rear power window down 2/119
CMI24	Relay, right rear power window up 2/117
CSH1	LH indicator shunt CEM 20/32
CSH2	RH indicator shunt CEM 20/34
CSH4	Shunt, low beam CEM 20/27



# Cable harness routing in vehicle Engine harness ME7/Denso

